卓を使わずL-PAR7を使用する場合の手順



卓を使わずL-PAR7を使用する場合の手順



卓を使用する場合に必要な設定の手順



L Par-7 Address							
fixtures No.	Address	fixtures No.	Address	fixtures No.	Address	fixtures No.	Address
1	1	21	161	41	321	61	481
2	9	22	169	42	329	62	489
3	17	23	177	43	337	63	497
4	25	24	185	44	345	64	505
5	33	25	193	45	353		
6	41	26	201	46	361		
7	49	27	209	47	369		
8	57	28	217	48	377		
9	65	29	225	49	385		
10	73	30	233	50	393		
11	81	31	241	51	401		
12	89	32	249	52	409	※8chモード	
13	97	33	257	53	417	① Red 0~100%	
14	105	34	265	54	425	② Geen 0~100%	
15	113	35	273	55	433	③ Blue 0	\sim 100%
16	121	36	281	56	441	④ White 0~100%	
17	129	37	289	57	449	⑤ ストロボ	
18	137	38	297	58	457	⑥ 調光 0~100%	
19	145	39	305	59	465	⑦ズーム	45°~7°
20	153	40	313	60	473	⑧ リセット	<

オールリセットの仕方

