

**OWNERS MANUAL** 

# AS-42D COMPACT DMX DIMMER

IMPORTANT: Please take a moment to read this manual before operating the AS-42D DImmer

Version 2.0 02/14/2005

Page 1 of 5



#### DESCRIPTION

The AS-42D is a compact 4 channel light dimmer. It has a maximum capacity of 1200 Watts per channel and maximum total load capacity of 4800 Watts. It is supplied with 2 input power cord stubs which may be connected to 2 different 120 VAC power phases. The AS - 42D is intended for INDOOR USE ONLY. The unit operates using the USITT DMX-512 protocol or an industry standard three wire multiplex protocol. The AS-42D may be operated in a relay (non-dim) mode. The unit will also function as a chaser and has several preset chase patterns which may be used.

#### INSTALLATION

LOCATION: Locate the unit in a well ventilated area away from moisture and heat. Two ½" holes are provided on the dimmer top cover to install a lighting bar pipe clamp and suitable safety cables.

POWER CONNECTIONS: Extending from the chassis are two 20 amp line cords for connection to 2 <u>separate</u> 120 VAC grounded services in any phase combination. Total capacity of the AS-42D is 4800 watts.

LOAD CONNECTIONS: There are 4 numbered duplex outlets on the top of the unit. Each provides 2 connections for one of the output channel. You can connect up to 1200 Watts of lighting to each channel.

STAGE PIN OUTPUT CONNECTOR OPTION: There are 4 numbered female stage pin connectors on the top of the unit. One connection is provided for each output channel. Wiring information for the stagepin connectors is shown on the top of the unit.

#### CONTROL SIGNAL CONNECTIONS:

FOR MULTIPLEX OPERATION: The male three pin XLR connector on the unit end panel connects to the control console. The female connector is for connection to additional dimmers. The AS-42D dimmer is compatible with the Lightronics and NSI/Sunn three wire multiplexed protocol. If you have older Lightronics dimmers which run in the obsolete Lightronics mode only, contact Lightronics for information on changing the mode. When using multiple dimmers, ALL dimmers MUST be in the SAME mode.


FOR DMX-512 OPERATION: The male five pin XLR connector on the unit end panel connects to the control console. The female connector is for connection to additional dimmers. The AS-42D dimmer is compatible with the USITT DMX-512 protocol. If both multiplex and DMX signals are available to the unit - it will automatically lock on to the DMX signal. Note that the DMX standard does not provide for console power via the dimmer chain. Therefore the DMX console used with AS-42D dimmers must be powered by other means.

Version 2.0

#### AS-42D COMPACT DMX DIMMER OWNERS MANUAL

02/14/2005

# AS-42D END VIEW

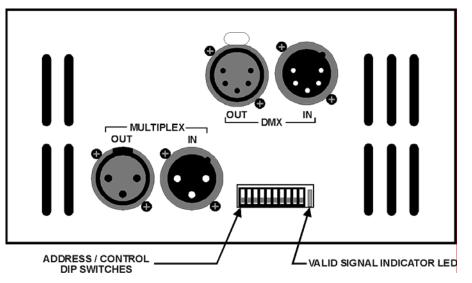

#### CONTROL SIGNAL WIRING:

Connector Pin #	1	2	3	4	5
LMX-128 (multiplex)	LMX Common	Console Power	Multiplex Signal	Not Used	Not Used
DMX-512	DMX Common	DMX Data -	DMX Data +	Not Used	Not Used

#### OPERATION

NORMAL MODE (non-chaser)

A green LED in the end panel will indicate that a valid control signal (DMX or multiplex) is applied to the unit. A DIP switch block on the end panel selects the starting channel number of the dimmer. The 7 right hand switches control this function. For example, if all switch positions are down - the dimmer will respond to channels 1-4. Moving the switch position on the far right up will set the dimmer to respond to channels 5-8. A complete table of channel assignments is provided in this manual.. You can address up to 512 channels using DMX control and up to 128 channels with multiplex control.

RELAY MODE: Pairs of channels (1/2 and/or 3/4) may be switched into the relay mode. In this mode the output of these channels will be either off or full on depending on the control console channel setting. The trip point for turn on is aprox. 50%. The 2 left hand switches on the DIP switch block control relay mode channel selection.

#### CHASER MODE:

When operating in the chaser mode the AS-42D becomes independent of the control console and other dimmers. The green LED indicator is OUT when in the chaser mode. Chaser mode is turned on and off by one of the DIP switches on the end of the unit. A diagram on the unit cover unit shows the switch settings for chaser operation.

Eight different chaser patterns are available. A "bounce" condition may be used on several of the chase patterns by setting one of the DIP switches. The bounce condition causes the chase pattern to run in alternating directions.

The chase step time may be controlled for up to 64 seconds per step. Step fade time is proportional to the step time. If a channel is in the relay mode during chaser operation - it will "snap" on and off (zero fade time). The tables below show the details of chaser settings.


Version 2.0

# AS-42D COMPACT DMX DIMMER OWNERS MANUAL

02/14/2005

Page 3 of 5

#### ADDRESS AND CONTROL SWITCH SETTINGS

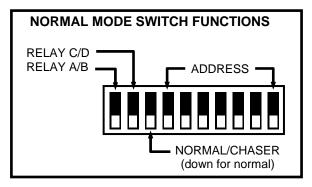

# CHASER MODE SWITCH FUNCTIONS

# CHASER PATTERN SELECTION

SWITCHES	PATTERN
$\mathbf{\hat{U}}\mathbf{\hat{U}}\mathbf{\hat{U}}$	4 chan. sequence
₽₽₽	4 chan. build
₽₽₽	4 chan. build/unbuild
₽₽₽	4 chan. random

SWITCHES	PATTERN
∎₽₽	3 chan. sequence +
∎₽₽	3 chan. build
<b>↑</b> ↑↓	3 chan. build/unbuild
	2 chan. alternating

# CHASER TIMING SELECTION

SWITCHES	STEP TIME (Duration)		
<b>በበሰ</b>	.5 seconds		
₽₽₽	1.0 seconds		
₽₽₽	2 seconds		
₽₽₽	4 seconds		

SWITCHES	STEP TIME (Duration)
∎₽₽	8 seconds
Ţ₽Ţ	16 seconds
ŢŢŢ	32 seconds
<b>111</b>	64 seconds

#### MAINTENANCE AND REPAIR

#### TROUBLESHOOTING

- Check that you have power applied to the dimmer.
- Check that all light fixtures are functional.
- Check the fuses.

- Check the multiplex and/or DMX cable.
- Check the settings of the dimmer DIP switches.
- Check the console setup for correct patching.

#### REPAIR

The only user serviceable parts are externally accessible fuses. Replace fuses ONLY with 10 Amp, 250VAC, fast blow fuses. Internal service on the unit by other than Lightronics authorized agents will void the warranty. If service is required, contact the dealer from whom you purchased the dimmer, or Lightronics, Service Department, 509 Central Drive, Virginia Beach, VA 23454. Tel: 757 486 3588.

www.lightronics.com

# AS-42D COMPACT DMX DIMMER

Page 4 of 5

#### **OWNERS MANUAL**

# CHANNEL ASSIGNMENT SETTINGS

The DIP Switch Setting column shows the positions of the DIP switches on the dimmer. The Start Channel column shows the resulting channel assignment for the first channel of the dimmer

All Lightronics products using DIP switches for address assignments conform to this table. Some dimmers cannot be set to all 512 channels and will have fewer switches than are shown in the table. If this is the case then match the right end switches in the table to your dimmer switches. NOTE: Some control consoles can be programmed or "patched" to alter their channel order. You may get unexpected results if you are not aware of the console patch condition when you assign channels at a dimmer.

EXAMPLE: If a dimmer's DIP switches are set to  $\mathcal{D} \mathcal{D} \mathcal{D} \mathcal{D} \mathcal{D} \mathcal{D} \mathcal{D} \mathcal{D}$  then the first channel of the dimmer will respond to console channel 173. The remaining dimmer channels will respond to console channels 174, 175, 176 ... etc.

DIP Switch Setting	Start Channel	DIP Switch Setting	Start Channel	DIP Switch Setting	Start Channel	DIP Switch Setting	Start Channel
<u> </u>	1	Ŷ <b>IJ</b> ŶŶŶŶŶ	129	<b>U</b> ÛÛÛÛÛÛ	257	<b>00</b> 00000	385
000000	5	<b>ŶŨ</b> ŶŨŶŨ <b>Ũ</b>	133	0000000	261	0000000	389
0000000	9	<b>ŶŮ</b> ŶŶŶŶŶŶ	137	0000000	265	0000000	393
ŶŶŶŶŶŶ <b>ŎŬ</b>	13	Ŷ <b>IJ</b> ŶŶŶŶ <b>IJIJ</b>	141	0000000	269	0000000	397
<u> </u>	17	<b>10000000</b>	145	<b>U</b> ÛÛÛÛÛÛ	273	00000000	401
<b>ŶŶŶŶŶŶŶŶ</b>	21	Ŷ <b>IJ</b> ŶŶŶŶŶŶ	149	0000000	277	0000000	405
<b>ûûûûûû</b>	25	<b>Υθύτθυ</b> τ	153	<b>U</b> ÛÛÛÛÛÛ	281	0000000	409
<b>ûûûû000</b>	29	Ŷ <b>IJ</b> ŶŶ <b>IJIJ</b>	157	0000000	285	0000000	413
<b>ûûûûûû</b>	33	<b>10000000</b>	161	<b>U</b> ÛÛÛÛÛÛ	289	00000000	417
<b>ŶŶŶŮŶŶŮ</b>	37	Ŷ <b>IJ</b> ŶŮŶŮŶŶÛ	165	0000000	293	00000000	421
<b>ûûûûûû</b>	41	Ŷ <b>IJ</b> ŶIJŶIJŶ	169	<b>U</b> ÛÛÛÛÛÛ	297	0000000	425
ŶŶŶ <b>Ů</b> Ŷ <b>Ů</b> Ŷ	45	Ŷ <b>IJ</b> ŶIJŶIJIJ	173	0000000	301	00000000	429
<b>ŶŶŶŮŮŶŶ</b>	49	<b>ΔΟΔΟΟΔΦ</b>	177	<b>U</b> ÛÛ <b>U</b> ÛÛ	305	0000000	433
<b>ŶŶŶŮŬŶŬ</b>	53	Ŷ <b>U</b> Ŷ <b>U</b> ÛŶÛ	181	000000	309	0000000	437
<b>ŶŶŶ<b>ŬŬŬ</b>Ŷ</b>	57	000000	185	<b>U</b> ÛÛ <b>UU</b> Û	313	000000	441
<b>ŶŶŶ0000</b>	61	000000	189	000000	317	000000	445
<b>የየሀ</b> የየየ	65	<b>000</b> 0000	193	<b>U</b> ÛUÛÛÛÛ	321	00000000	449
<b>ŶŶŮŶŶŶŮ</b>	69	Ŷ <b>IJIJ</b> ŶŶŶŶŶ	197	0000000	325	0000000	453
<b>ŶŶŮŶŶŮŶ</b>	73	<b>ΥΟΟ</b> ΥΥΟΥ	201	<b>U</b> ÛUÛÛÛÛÛ	329	0000000	457
$\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}$	77	Ŷ <b>IJIJ</b> ŶŶ <b>IJIJ</b>	205	0000000	333	00000000	461
<b>ûûuûûûû</b>	81	<b>ΥΟΟΥΟ</b> ΥΥ	209	<b>U</b> ÛUÛÛÛÛ	337	0000000	465
$\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}$	85	<b>ΔΟΟΦΟΦΟ</b>	213	0000000	341	00000000	469
$\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}$	89	0000000	217	0000000	345	0000000	473
0000000	93	0000000	221	0000000	349	0000000	477
<b>ûû00</b> ûûû	97	<b>Ϋθθθ</b> ΫΫ	225	<b>U</b> ÛUUÛÛÛ	353	0000000	481
$\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}$	101	<b>Δ000</b> ΦΦ0	229	0000000	357	00000000	485
$\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}$	105	<b>ΔΟΟΟΦΟ</b> Φ	233	<b>U</b> Û U Û U Û U Û U Û U Û U Û U Û U Û U Û	361	0000000	489
ŶŶ <b>ŨŨ</b> Ŷ <b>Ũ</b>	109	Ŷ <b>000</b> Ŷ <b>00</b>	237	0000000	365	0000000	493
ÛÛ <b>UUU</b> ÛÛ	113	000000	241	<b>U</b> Û <b>UUU</b> ÛÛ	369	00000ûû	497
000000	117	000000	245	0000000	373	00000000	501
$\hat{U}\hat{U}$	121	<b>Δ00000</b> Ω	249	000000	377	000000	505
$\hat{U}\hat{U}$	125	<b>000000</b>	253	000000	381	0000000	509

www.lightronics.com

